

Rockbridge Camera Club



Most cameras have the following metering modes:

Multi-Zone






Center Weighted



Spot

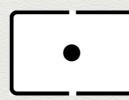



Multi-Zone Metering





The camera meters the whole frame, but weights the area under the focus point

Works best when the scene is uniformly illuminated

Default metering modes for most cameras

Usually covers most situations



Center Weighted Metering



The camera meters the whole frame, but weights the center of the frame

Could provide erroneous results if the focus point is off center

There are very few situations where centered weighted is an advantage – not recommended



Spot Metering




The camera meters a small area under the focus point

Many cameras provide for adjusting the size of the spot metering area

Best when the subject and background are differently illuminated



Spot Metering Examples

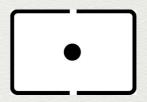






Spot Metering



Spot Metering Examples

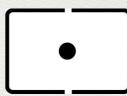







Spot Metering



FocusAutofocus Modes

AF-S (Single) One Shot (for Canon)

Autofocus locks when focus is acquired

Useful for stationary objects

AF-C (Continuous) Al-S (for Canon)

Autofocus remains on while half pressing the shutter button

Useful for moving objects

AF-A (Auto)
 AI Focus (for Canon)


The camera decides which mode to use (not recommended)



Camera Tips & Tricks

Focus

Single Point

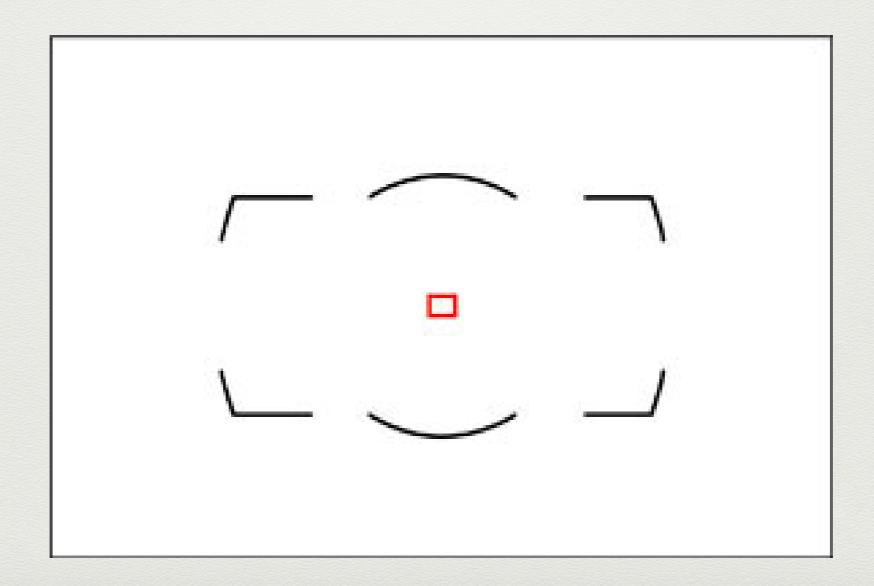



FocusMoving the Active Focus Point






Nikon Canon



Camera Tips & Tricks


Focus

9 Points

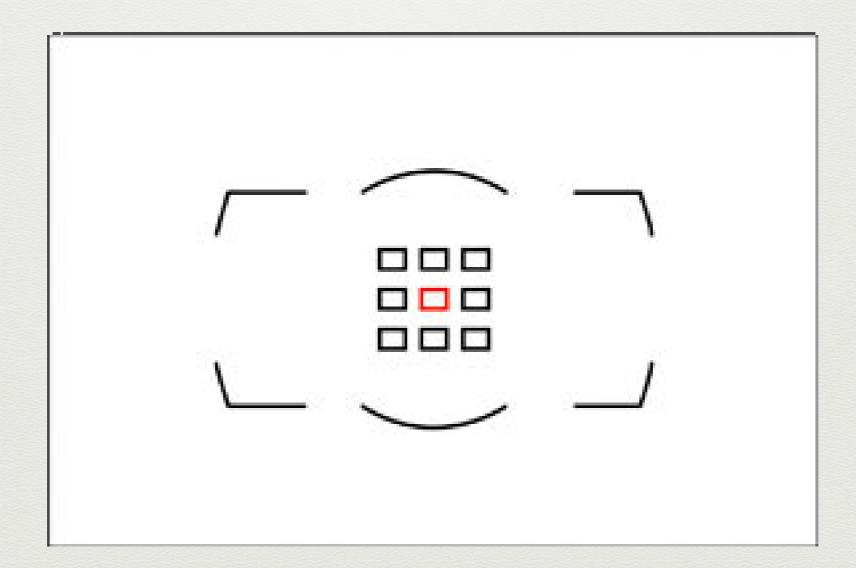



Focus
Action Shot Using 9 Point Autofocus

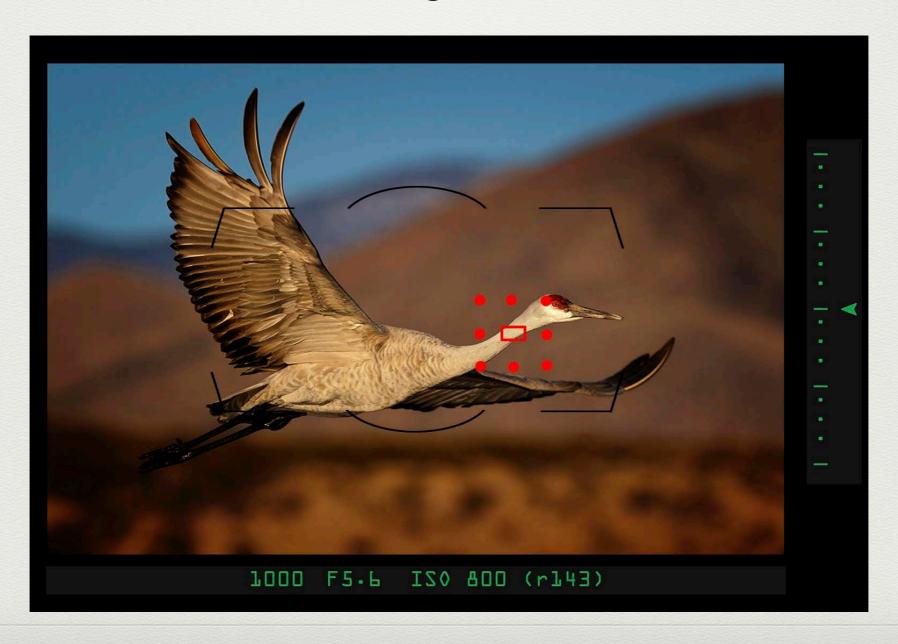






Camera Tips & Tricks

Focus

All Points

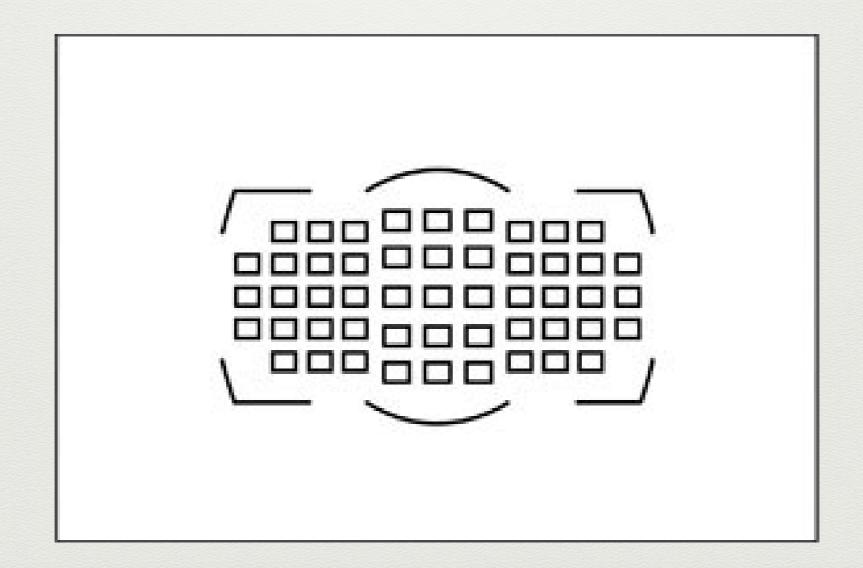



Focus

Which Focus Points to Use

Single Point:

Best for stationary subjects

9 Points:

Usually works well with moving subjects where it is difficult to use a single point

All Points:

Use with moving subjects where there is no detail in the background



Focus Changing Autofocus Modes and Points - Nikon



On Nikon cameras, press the center button on the AF/M switch and rotate the main command dial for focus mode, rotate the subcommand dial for number of active focus points.



FocusChanging Autofocus Modes and Points - Canon



Set the AF Mode: Press the AF/Drive button on the topplate of the camera and look at the top LCD screen. Rotate the front dial near the shutter release button until the desired AF mode is displayed.



Set the number of AF Points: Press the AF point button on the back of the camera then look through the viewfinder while pressing the M-Fn button to toggle through the options.



Focus Back Button Autofocus

- Utilized by most professional photographers
- Disable autofocus with shutter button half press
- Assign autofocus to a button on camera back
- Autofocus mode set to Continuous

Back Button Autofocus Video (Nikon)